#9464, #9462 and #9458
IP DashCam Manual

Instant Proof is a division of 636 Distributing Inc.
5794 Wellington Road 86 Ariss, ON N0B 1B0
519-822-8400
www.instantproof.ca

Table of Contents

Introduction	1
Warnings	1
Dash Camera Spec Comparison	2
IP Dashcam #9458 – Product Quick Guide	3
IP Dashcam #9462 – Product Quick Guide	4
IP Dashcam #9464 – Product Quick Guide	5
Buttons and Menu Instructions	6
Special Function Instructions	7
Video / Photo Operation	7-8
Battery Instructions	9
Operational Settings	9
IP Dashcam Menus	10-12
Frequently Asked Questions	13

Thank you for purchasing one of our IP Dashcams. This in-vehicle digital video recorder is the best way to provide objective information in the event of a vehicular incident. The IP Dashcams take up minimal space, are easy to use and install quickly in any vehicle. The IP Dashcams help to document driving/parking accidents, protect you from insurance fraud and capture those unexpected moments we call INSTANT PROOF – all hands free!

Warnings

This user manual details "how to use" our IP Dashcams, functions, technical specifications and precautions. Please read this manual in its entirety so you fully understand how to use our products.

Do not use the IP Dashcam in damp conditions – they are not waterproof and are not designed to function if they are exposed to rain or other wet conditions.

Do not tamper with the internal components of the IP Dashcam or try to repair it yourself. This will void your warranty. Please contact us if the camera is not working or if you think you have a warranty issue.

Do not use any harsh solvents or chemical cleaners on your IP Dashcam. Clean only with a slightly damp soft cloth.

Make sure that the lens surface is free of dust and debris or this may affect video quality

636 Distributing Inc. is not responsible for any vehicle collisions, damage or personal injuries resulting from the use of any of our IP Dashcams

636 Distributing is not responsible for any legal repercussions from use of any IP Dashcam or from the sharing of footage

636 Distributing is not responsible for any property damage caused by theft of any IP Dashcam from your vehicle or for replacing your IP Dashcam if lost or stolen

Dash Camera Spec Comparison

	#9458	#9462	#9464
Video			
Resolution:	WFHD: 2560*1080P/30fps Super HD: 2304*1296/30fps FHD: 1920*1080P/30fps	1920*1080P/30fps	1920*1080P/25fps
Video Format:	.MOV	.MOV	.AVI
Video Codec:	H.264, Audio: AAC	H.264, Audio: AAC	N/A
Image			
Resolution:	16MP	12MP / 8MP / 5MP / 3MP	12MP / 8MP / 5MP / 3MP
Photo Format:	JPEG	JPEG	JPEG
Lens:	170° Ultra Wide Angle	170° View Angle	140° View Angle
Features			
G-Sensor:	Yes	Yes	Yes
Loop Recording:	Yes	Yes	Yes
Motion Detection:	Yes	Yes	Yes
Built-in Speaker	Yes	Yes	Yes
Built-in MIC	Yes	Yes	Yes
GPS Tracking:	Yes	No	No
Auto Power On/Off	Yes	Yes	Yes
Usability			
LCD Screen:	2.7” LCD Screen	2.7” LCD Screen	1.5” LCD Screen
Languages:	English, Russian, Simplified Chinese, Korean, Japanese, Traditional Chinese, ect.	English, Russian, Simplified Chinese, Korean, Japanese, Traditional Chinese, ect.	English, Russian, Simplified Chinese, Korean, Japanese, Traditional Chinese, ect.
Memory Card:	MicroSD Card (up to 64GB)	MicroSD Card (up to 32GB)	MicroSD Card (up to 32GB)
TV Output:	PAL/NTSC	PAL/NTSC	PAL/NTSC
Interface:	USB/HDMI/TV-OUT AV IN	USB/HDMI	USB/HDMI
Frequency:	50HZ/60HZ	50HZ/60HZ	50HZ/60HZ
Power Port:	5V 1.5A/1+5-	5V 1A	5V 1A
Battery:	Built-in Polymer Battery	Built-in, 260mAh	Built-in, 100mAh

IP Dashcam #9458 - Product Quick Guide

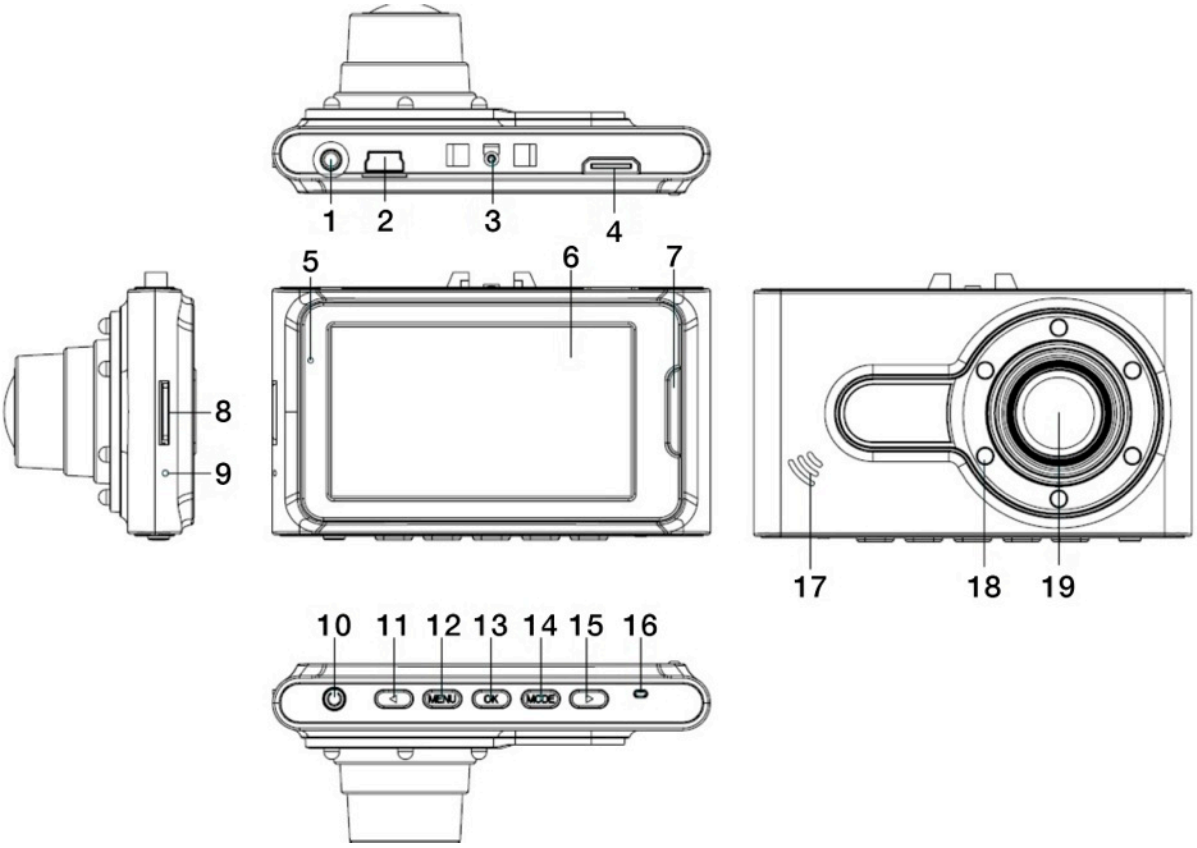

1) AV OUT or GPS	2) USB Interface	3) Mount Connector
4) HDMI Interface	5) Power Indication Light	6) Screen
7) SOS Emergency	8) MicroSD Slot	9) Mic
10) Power	11) Up Button	12) Menu Button
13) OK Button	14) Mode Button	15) Down Button
16) Reset	17) Speaker	18) IR Lights
19) High Definition Lens		

IP Dashcam #9462 - Product Quick Guide

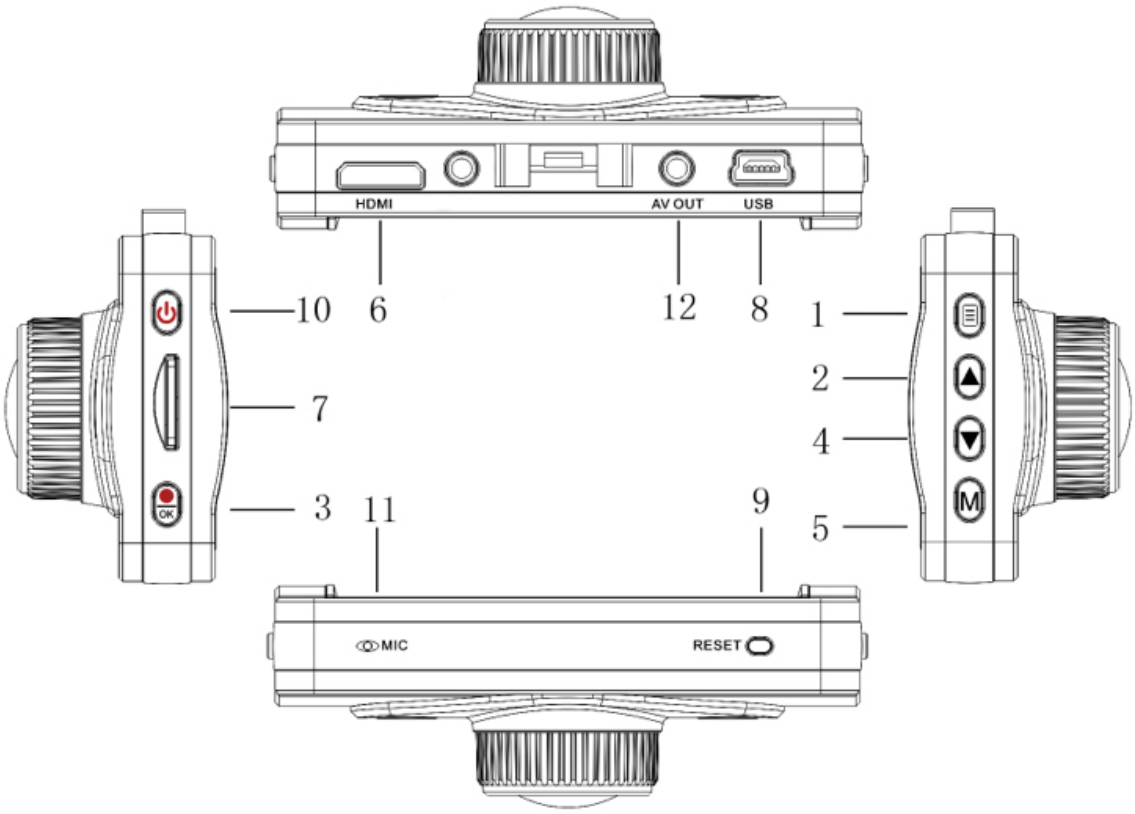

1) Menu Button	2) Up Button	3) OK Button
4) Down Button	5) Mode Button	6) HDMI-OUT
7) MicroSD Slot	8) USB	9) Reset
10) Power Button	11) Mic	12) AV Out

IP Dashcam #9464 - Product Quick Guide

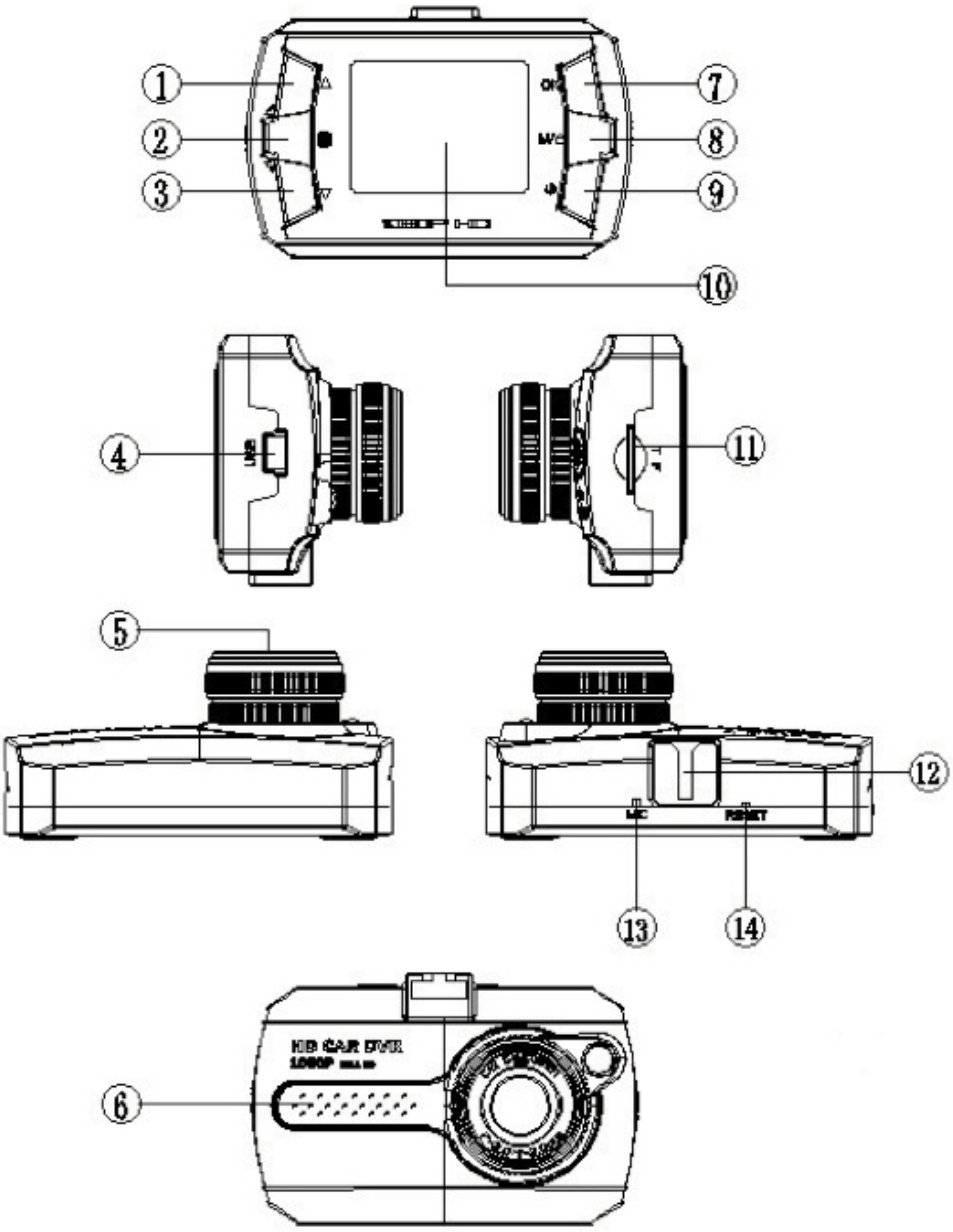

1) Up Button	2) Menu Button	3) Down Button
4) USB Port	5) Lens	6) Speaker
7) OK Button	8) Mode Button / SOS	9) Power Button
10) Screen	11) MicroSD Slot Mic	12) Mount Connection
3) Microphone	14) Reset	

Button and Menu Instructions

Button Name	Button Function	Instructions
Power	Power on/off	1. Power on: Short press to turn on and the red/blue indicator light is on 2. Power off: Long press to turn off and the red/blue indicator light is off
Reset	Reset	Short press to turn the dashcam on again when the machine is in standby mode
OK Button	Video Start/Stop, Photos, Menu confirmation	1. Video mode: Short press to start recording, short press again to stop recording 2. Photograph mode: Short press to take a photo 3. Menu mode: Set and confirm chosen option
Menu	Photograph/record/ playback, all functions setting	1. In the video mode: short press once to switch video setting; short press twice to switch system setting. 2. In the photograph mode: short press once to switch photograph setting; short press twice to switch system setting; 3.In the video/photo playback mode: short press once to switch playback setting; short press twice to switch system setting;
Up	Navigate up in menu Turn on/off the audio recording function	1. Menu mode: Navigate Up through the options 2. Video mode: Short press to turn on/off audio recording
Down	Navigate Down in menu	Menu mode: Navigate Down through the options
Mode	Switch between photos / recording / playback	Video mode: Switch between photographs / recording / playback In the video mode press the mode button quickly for screenshot
SOS Emergency Button	Locks the file	Press to lock the file while in video mode
MicroSD Slot	N/A	Insert the MicroSD Card into this slot to be able to record video
HDMI Interface	High definition output	1. Connect to HD television with HDMI cable, put video mode and you can view video/photos, in photograph mode, you can make photos, and view video and photos
AV Slot / GPS	AV or GPS Output	1. If you have GPS on this model then the AV output is not active 2. If you don't have GPS then the AV slot will be active
Mount Connection		This is where you connect your IP Dashcam to the windshield mount
USB Output	Recording/Storage	1. Connect USB cable for auto recording, and to view the videos/photos 2. Connect USB cable for auto charging

Special Function Instructions

G-sensor Function

When gravitational acceleration reaches (1g=9.80Meter/Second^2), the IP Dashcam DVR will save the accident video and you will be unable to delete the file. G-sensor sensitivity can be adjusted in the menu (Off/High/Middle/Low), the factory default is the middle level.

SOS Function

During video recording, press MODE button to save the current video so the file cannot be deleted.

GPS Function (#9458 IP Dashcam Only):

The video that is recorded with the GPS module can be played with a DVR player and it will show the detailed location of where the video was taken

Video/Photo Operation

Video Mode

Press the Mode button Ⓜ to switch to video mode, there will be a video recorder icon shown on the top left corner of LCD screen

Press the ok button OK to start recording, the icon will start to flash, and the indicator light will also start to flash which means that the device is working.

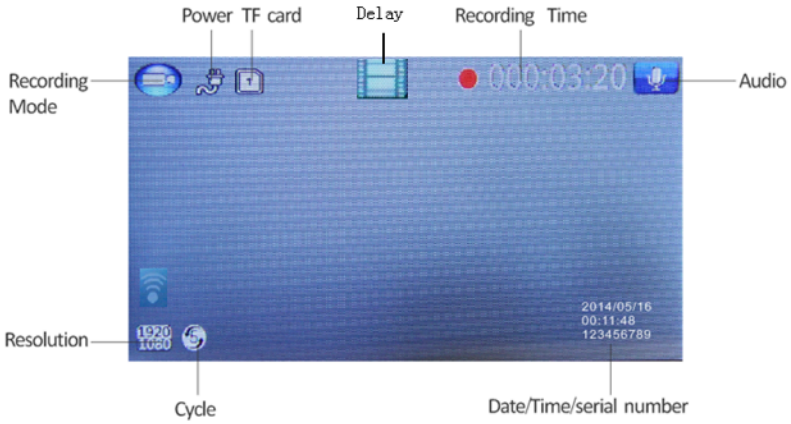

Photo Mode

Press the Mode button to switch to photo mode, there will be a camera icon shown on the top left corner of LCD.

Press ok button to take a picture, when the photo is finished, the LCD indicator ligh twill flash once

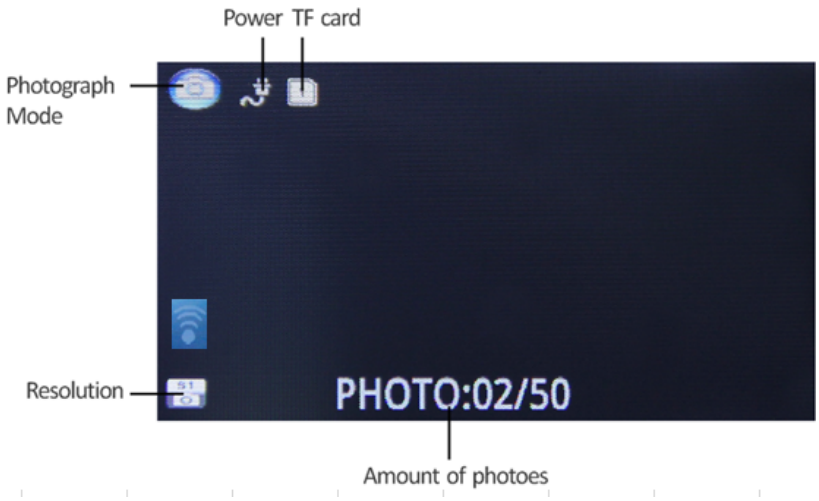

Video/Photo Playback

Press the Mode button to switch to playback mode, the playback icon will be shown on the LCD screen's top left corner

Press the UP button to go up in file selection

Press the DOWN button to go down in file selection

Press the OK button to play the selected video

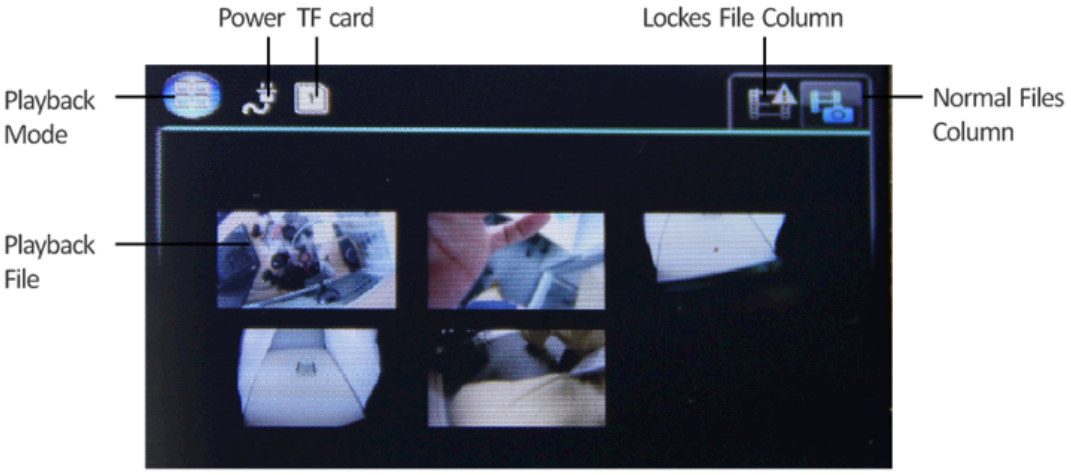

Battery Instructions

Please see below illustration for battery capacity indication

Full Power Lower Power Lowest Power No Power

Charging Methods

1. Charge by connecting the IP Dashcam to a computer via the USB data cable – the indicator light will be on while your IP Dashcam is charging.
2. Charge by connecting the IP Dashcam to the cigarette lighter charger
3. Connect the IP Dashcam to the USB data cable and connect the USB cable to any wall charger

All IP Dashcams require 120 mins to fully charge the battery and when charging is complete, the indicator light will turn off **Please note: When the power is low, the device will turn off automatically after a low battery warning

Operational Settings

Operating guide - Auto power on/off:

All IP Dashcams will start recording automatically once you start your vehicle and it will save the video and power off when you turn the vehicle off

Menu Setting

Press menu button to enter the menu, to view each setting, press the up button or the down button, select the option that needs to be changed, and press the OK button to confirm the change, thenPress menu button to exit the menu

Time Setting

Press and hold the menu button to get into settings then press the down button to choose the date setting, press the OK button and the change the Year/ Month/ Day/ Hour/ Minute /Second by using the up or down buttons, then press the OK button to confirm

USB Mode

Connecting the USB cable to the computer and power on your IP Dashcam - the following message will pop up USB-Disk. You can save and copy the videos / pictures while in this mode

DASHCAM MENUS

	#9958 DASHCAM	#9962 DASHCAM	#9964 DASHCAM
Indicator Lights			
Charging:	Blue Indicator Light	Red Indicator Light	Red Indicator Light
Standby:	Red Indicator Light	Blue Indicator Light	Blue Indicator Light
Video Settings Menu (Push Menu Button Once In Video Mode)			
Resolution:	2560x1080 30P 21:9 2304x1296 30P 16:9 1920x1080 30P 16:9 HDR 1920x1080 30P 16:9 1280x720 60P 16:9	1080FHD 1920x1080 720P 1280x720 WVGA 848x480 VGA 640x480	1080FHD 1920x1080 720P 1280x720 WVGA 848x480 VGA 640x480
Loop Recording:	- Off - 1 Minutes - 3 Minutes - 5 Minutes	- Off - 3 Minutes - 5 Minutes - 10 Minutes	- Off - 3 Minutes - 5 Minutes - 10 Minutes
Exposure:	N/A	+2.0 +5/3 +4/3 +1.0 +2/3 +1/3 +0.0 -1/3 -2/3 -1.0 -4/3 -5/3 -2.0	+2.0 +5/3 +4/3 +1.0 +2/3 +1/3 +0.0 -1/3 -2/3 -1.0 -4/3 -5/3 -2.0
Motion Detection:	- Off - On	- Off - On	- Off - On
Record Audio (Mic):	- Off - On	- Off - On	- Off - On
Date Stamp (Stamp Setting):	- Date - Time - Driver ID	- Off - On	- Off - On
GSENSOR:	- Off - High - Medium - Low	- Off - High - Medium - Low	- Off - 2G - 4G - 8G
WDR (#9462 Only):	N/AI	- Off - On	N/A
Image Quality (#9458 Only):	- S.Fine - Fine - Normal	N/A	N/A
Time Lapse Setting (#9458 Only):	- Off - Intelligence Mode - 0.2 sec - 0.5 sec - 1 sec - 5 sec - 30 sec	N/A	N/A
Meter Mode Setting (#9458 Only):	- Center - Average - Spot	N/A	N/A
Anti-Flicker (#9458 Only):	- Auto - 60 Hz - 50 Hz	N/A	N/A
ADAS Detect (#9458 Only):	- Off - On	N/A	N/A
ADAS Calibration (#9458 Only):	Select to calibrate the ADAS	N/A	N/A
Parking Mode (#9458 Only):	- Off - On	N/A	N/A

DASHCAM MENUS

Photo Settings Menu (Push Menu Button Once In Photo Mode)

	#9958 DASHCAM	#9962 DASHCAM	#9964 DASHCAM
Capture Mode:	N/A	- Single - 2s Timer - 5s Timer - 10s Timer	- Single - 2s Timer - 5s Timer - 10s Timer
Photo Resolution:	- 16M (5312x2988 16:9) - 13M (4800x2700 16:9) - 9M (4000x2250 16:9) - 4M (2688x1512 16:9)	- 12M 4032x3024 - 10M 3648x2736 - 8M 3264x2448 - 5M 2592x1994 - 3M 2048x1536 - 2MHD 1920x1080 - VGA 640x480 - 1.2M 1280x960	- 12M 4032x3024 - 10M 3648x2736 - 8M 3264x2448 - 5M 2592x1994 - 3M 2048x1536 - 2MHD 1920x1080 - VGA 640x480 - 1.3M 1280x960
Image Quality:	- S.Fine - Fine - Normal	- Fine - Normal - Economy	- Fine - Normal - Economy
Sequence:	N/A	- Off - On	- Off - On
Sharpness:	N/A	- Soft - Normal - Strong	- Soft - Normal - Strong
White Balance:	N/A	- Auto - Daylight - Cloudy - Tungsten - Fluorescent	- Auto - Daylight - Cloudy - Tungsten - Fluorescent
Colour:	N/A	- Colour - Black/White - Sepia	- Colour - Black/White - Sepia
ISO:	N/A	- Auto - 100 - 200 - 400	- Auto - 100 - 200 - 400
Exposure:	N/A	+2.0 +5/3 +4/3 +1.0 +2/3 +1/3 +0.0 -1/3 -2/3 -1.0 -4/3 -5/3 -2.0	+2.0 +5/3 +4/3 +1.0 +2/3 +1/3 +0.0 -1/3 -2/3 -1.0 -4/3 -5/3 -2.0
Anti-Shake:	N/A	- Off - On	- Off - On
Quick Review:	N/A	- Off - 2 seconds - 5 seconds	- Off - 2 seconds - 5 seconds
Date Stamp (Stamp Setting):	- Date - Time - Driver ID	- Off - Date - Date/Time	- Off - Date - Date/Time

DASHCAM MENUS

Camera Settings Menu (Push Menu Button Twice In Any Mode)

	#9958 DASHCAM	#9962 DASHCAM	#9964 DASHCAM
Date/Time (Time Setup):	Set Date: yyyy/mm/dd Set Time: h/m/s Change How Date is Display: - yy/mm/dd - dd/mm/yy - mm/dd/yy	Set Date: yyyy/mm/dd Set Time: h/m/s Change How Date is Display: - yy/mm/dd - dd/mm/yy - mm/dd/yy	Set Date: yyyy/mm/dd Set Time: h/m/s Change How Date is Display: - yy/mm/dd - dd/mm/yy - mm/dd/yy
Language:	- English - Français - Español - Português - Duetsch - Italiano - Traditional Chinese - Simplified Chinese - Russian - Japanese	- English - Français - Español - Português - Duetsch - Italiano - Traditional Chinese - Simplified Chinese - Russian - Japanese	- English - Français - Español - Português - Duetsch - Italiano - Traditional Chinese - Simplified Chinese - Russian - Japanese
Beep Sound:	- Off - On	- Off - On	Located in Video Menu - Off - On
Beep Sound:	- Off - On	- Off - On	Located in Video Menu - Off - On
Auto Power-Off:	- Off - 1 Minute - 3 Minutes - 5 Minutes	- Off - 1 Minute - 3 Minutes - 5 Minutes - 10 Minutes	- Off - 1 Minute - 3 Minutes
Frequency:	N/A	- 50 Hz - 60 Hz	- 50 Hz - 60 Hz
Format:	SD Card - Clears all files on SD Card	SD Card - Clears all files on SD Card	SD Card - Clears all files on SD Card
Default Setting:	Return menu settings to default - Cancel - Ok	Return menu settings to default - Cancel - Ok	Return menu settings to default - Cancel - Ok
Backlight	- Off - 1 Minute - 3 Minutes - 5 Minutes	- Off - 1 Minute - 3 Minutes - 5 Minutes	N/A
TV Mode (System Mode)	- NTSC - PAL	- NTSC - PAL	N/A
Version:	View Current Camera Version	View Current Camera Version	View Current Camera Version
Screensavers (#9464 Only):	N/A	N/A	- Off - 3 Minutes - 5 Minutes - 10 Minutes
Image Rotation (#9464 Only):	N/A	N/A	- Off - On
Lamp Setting (#9462 Only):	N/A	- Off - On	N/A
Card Volume (#9458 Only):	View SD Card Specs, space used & space remaining	N/A	N/A
Driver ID Setting (#9458 Only):	Enter your driver id	N/A	N/A
GPS Set (#9458 Only):	- On - Off	N/A	N/A

Frequently Asked Questions

Under normal operating conditions, if there is a problem with your IP Dashcam – please refer to the following troubleshooting ideas

Cannot take pictures or record videos
Please check whether there is enough space left on the MicroSD card, or if it is in the locked position

Stops while recording
Due to the large amount of HD video data, please use a high-speed Class 10 MicroSD card that is SDHC compatible

“Wrong file” shows on LCD screen while you are replaying photos/videos
This is an incomplete file due to a MicroSD card storage error - please re-format your SD card

Fuzzy image
Please check the lens for dirt and fingerprints, if it is dirty then please clean the lens with a soft dust free cloth before you record any video

Dark image when taking video of the sky or water
Exposure in different environments impacts the video image - please adjust the “EV” in the menu setting

Poor color in cloudy weather or indoor video
Please check if the “white balance” option is set to Auto or not in the menu

Horizontal stripes in the image
This is due to the wrong setting of light frequency - please set the frequency to 60HZ or 50HZ according to the local power supply

Camera is frozen
Please press the reset to restart the camera if it becomes unresponsive

IP Dash Cameras

THEIR WORD – YOUR INSTANT PROOF

Copyright

© Copyright 2015.
All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, manual or otherwise, without the prior written permission of the manufacturer

Instant Proof is a Division of 636 Distributing Inc.

519-822-8400

www.instantproof.ca